


CONTENTS

HELP ALARM

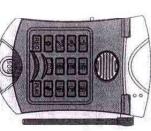

Main Unit



Adaptor



Telphone lead



Remote Handset



Two way splitter


HOW TO GET STARTED

- Connect the transformer to the main unit and plug into an electric socket in your property.
- 2. Insert batteries (4×AAA alkaline) not included






Connect telephone lead to the unit and to the telephone socket in your property.

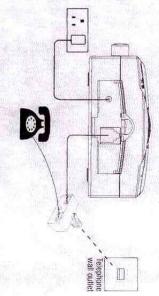

 4. Push switch to "On" position



O OPERATION

- 1. The HA28 is supplied with two remote handsets. Pleas note the remote handsets are pre-set at the factory and are ready to use once your personal message and telephone numbers have been stored.
- Switch the unit "ON" the red led light will flash for 3 seconds. Once the red led light stops flashing you can record your message and store upto 3 telephone number
 The remote control can operate the main unit at
- The remote control can operate the main unit at a distance of 30 meters.

Note: If the unit is turned "OFF" your recorded message and stored telephone numbers will not be deleted.

STORE TELEPHONE NUMBER

In standby mode, input the auto-dial numbers as following Ist set:

> will hear a pre-recorded message. The receiver of the call When the receiver answers the call from the HA28 they

+ 1 + phone number + 7

"(xxxxxxxxxx"

2nd set: 1 + 2 + phone number + 7 *

2××××××××

3rd set:

(√2) + (√3) + phone number + (√4) *3××××××××**

RECORD If you make a mistake just repeat the process above *For a PABX/PBX system add a '9' before the area code

the message for 6 seconds. When the red light is off Press both and # , the red indicator is on. Record record time is up.

PLEASE CALL FOR ASSISTANCE. PLEASE PRESS ANY OF KEY-PAD AND THIS WILL OPEN THE TWO WAY Suggested message: THIS IS THE "JONES" RESIDENCE COMMUNICATION. THE NUMBERED BUTTONS ON YOUR TELEPHONE

Press button to play back the message

ASK FOR HELP

on the main unit. The main unit will automatically dial the 3 x preset elephone numbers for a period of 45 seconds. Press the button on the remote handset or the " " button

cycles and then return to standby mode continue to dial the 3 × preset numbers for a period of 5 1. If the call receiver does not answer the phone, the unit will



X5

3 beeps. Once the conversation is over the unit will then one of the key-pad buttons on their phone after hearing the further 60 seconds the receiver of the call needs to press about to end. In order to extend the talk/listen time for a tion line after approximately 45 seconds they will hear 3 call from the HA28 has opened up the two way communicamaximum distance of 3 metres. Once the receiver of the hands free it is possible to communicate with the caller to a on their telephone key-pad. As the main unit (HA28) is the callers property by pushing one of the numbered buttons return to standby mode beeps this is to indicate that the two way communication is can then open up a two communication line and listen into

PLEASE NOTE:

telephone key-pad pushing one of the numbered buttons on the receivers The unit will continue to dial the stored telephone numbers you do not open the two way communication line by





INDICATORS

When the Red LED of main unit is illuminated, the back up battery is low.

Power supply

Remote:

A23S battery

Main unit: DC 6V transformer or 4 AAA batteries